


# RX9004 Rear Panel


Feb 2017

The RX9004 Rear panel is shown below.

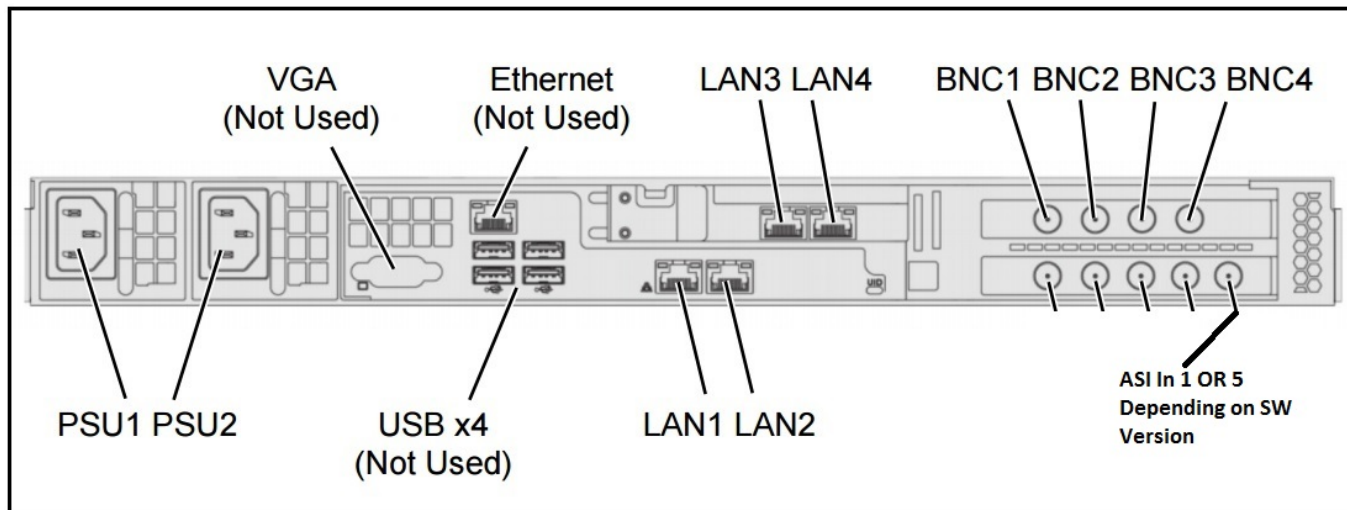

- S1 is generally what we use for ASI Inputs.
- LAN1 is used for control (but can be used for data)
- LAN2 is generally used for data input (unless you are using ASI Input).
- I have not seen LAN3/LAN4 on any Ericsson units yet.
- BNC1/BNC2/BNC3/BNC4 are for the SDI UHD Inputs and will work with quarter HD (QUAD) or 2SI feeds.

There are five spigots on the SDI card, the correct order is as follows:

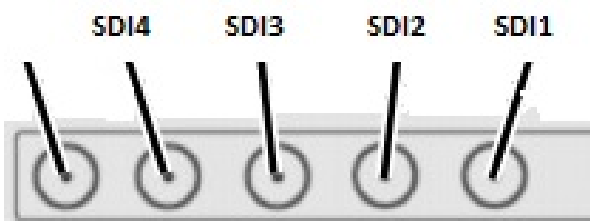

From:

<http://cameraangle.co.uk/> - WalkerWiki - [wiki.alanwalker.uk](http://wiki.alanwalker.uk)

Permanent link:

[http://cameraangle.co.uk/doku.php?id=rx9004\\_rear\\_panel&rev=1486995629](http://cameraangle.co.uk/doku.php?id=rx9004_rear_panel&rev=1486995629)

Last update: 2023/03/09 22:35

