

Check Pi CPU Temp

To check the CPU temp of the Pi, use the following from the command line:

```
cat /sys/class/thermal/thermal_zone0/temp
```

The result will return in milli °C, for my Pi right now I get:

```
53692. So 53692/1000 is 53.692 °C
```

From:

<http://cameraangle.co.uk/> - WalkerWiki - wiki.alanwalker.uk

Permanent link:

http://cameraangle.co.uk/doku.php?id=check_pi_cpu_temp&rev=1472411929

Last update: **2023/03/09 22:35**

