Enable Remote Access to GPIO Pins

If you are using your Raspberry Pi via SSH or a Remote Desktop session, you need to enable remote access of the GPIO Pins, to do this from the command line, do the following:

```
sudo raspi-config
```

2024/05/17 11:28

Expand Filesvstem	Ensures that all of the SD card storage is
Change User Password	Change password for the default user (pi)
Boot Options	Choose whether to boot into a desktop envi
Wait for Network at Boot	Choose whether to wait for network connect
Internationalisation Options	Set up language and regional settings to m
Enable Camera	Enable this Pi to work with the Raspberry
Add to Rastrack	Add this Pi to the online Raspberry Pi Map
Overclock	Configure overclocking for your Pi
Advanced Options	Configure advanced settings
About raspi-config	Information about this configuration tool
	- · · ·

Advanced Options:

Al Overscan	You may need to configure overscan if blac 1
A2 Hostname	Set the visible name for this Pi on a netw I
A3 Memory Split	Change the amount of memory made available 🐰
A4 SSH	Enable/Disable remote command line access
A5 SPI	Enable/Disable automatic loading of SPI ke
A6 I2C	Enable/Disable automatic loading of I2C ke
A7 Serial	Enable/Disable shell and kernel messages o 🛔
A8 Audio	Force audio out through HDMI or 3.5mm jack 🛔
A9 1-Wire	Enable/Disable one-wire interface
AA GPIO Server	Enable/Disable remote access to GPIO pins

Select GPIO Server

Would networ	you •k?	like	the	GPIO	server	to	be	accessible	over	the	
		~	<yes></yes>	>				<no></no>			

Last update: 2023/03/09 enable_remote_access_to_gpio_pins http://cameraangle.co.uk/doku.php?id=enable_remote_access_to_gpio_pins&rev=1470763125 22:35

Raspberry Pi Softwa	re Configuration Tool (raspi-config)					
1 Expand Filesystem	Ensures that all of the SD card storage is					
2 Change User Password	Change password for the default user (pi)					
3 Boot Options	Choose whether to boot into a desktop envi					
4 Wait for Network at Boot	Choose whether to wait for network connect					
5 Internationalisation Options	Set up language and regional settings to m					
6 Enable Camera	Enable this Pi to work with the Raspberry					
7 Add to Rastrack	Add this Pi to the online Raspberry Pi Map					
8 Overclock	Configure overclocking for your Pi					
9 Advanced Options	Configure advanced settings					
0 About raspi-config	Information about this configuration tool					

Now Select Finish - You will be back at the command prompt (you may need to reboot)

From:

http://cameraangle.co.uk/ - WalkerWiki - wiki.alanwalker.uk

Permanent link: http://cameraangle.co.uk/doku.php?id=enable_remote_access_to_gpio_pins&rev=1470763125

Last update: 2023/03/09 22:35

