

# Login Details

Nov 2017

There are two places you will need to login when using MFCP, they are:

The Web UI for operation changes  
The OS for Network Changes and Upgrades

## Web UI Login

The default login for the web UI is:

Username: admin  
Password: admin

## OS Login

To login to the OS (CentOS 7.3 at time of writing) there are two sets of credentials, one for customer use, that has a limited set of functionality, and a full login for Engineering staff.

Customer Login:  
Username: mfadmin  
Password: C&y4u2  
Engineer Login:  
Username: mfeng  
Password: 2u4y&C

From:  
<http://cameraangle.co.uk/> - WalkerWiki - [wiki.alanwalker.uk](http://wiki.alanwalker.uk)

Permanent link:  
[http://cameraangle.co.uk/doku.php?id=login\\_details](http://cameraangle.co.uk/doku.php?id=login_details)

Last update: **2023/03/09 22:35**

