

Recover from forgotten Cisco Password

Apr 2023



Introduction


While trying to reset the password on some Cisco switches, where I did not know the password, I tried to follow several guides online, and they all had some mis information or missing information. So I have put this together from a multitude of sources to hopefully provide something that means you won't have to go on the journey that I did.

What this guide will show you is how to reset a cisco 3560g or 3560x (and maybe other Cisco switches) password without losing the config. If you don't care about the existing configuration then at some point in this guide I will tell you to stop using the guide and start using the on screen Cisco prompts.

The steps are very simple, you need to be physically in front of the Cisco switch, connected to the Console port with the blue Cisco cable or in the case of the 3560x you have the option to use the USB console at the front (as well as the blue RJ45 at the rear)

Procedure

1. Connect the Cisco to your computer serial port, and establish a connection using: 8bit, no stop, 9600 baud. This way as soon as the switch starts to boot you will see it on your console.
2. Ensure that the switch is powered down.
3. With the switch in the powered down state, press and hold the MODE button (top left at the front for 3560x and bottom left at the front for 3560G) you need to hold this button in for 60 seconds.

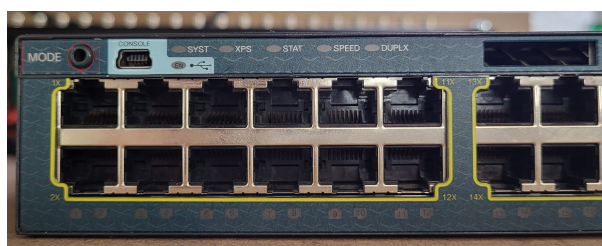

Configuration wizard.

However, if you need to keep the existing switch configuration and just change the password, then you need to enter 'no' at this point and carry on with this guide.

10. From the **switch:** prompt, enter:
en (for enable mode)

11. From the **switch:** prompt, enter:
rename flash:config.old flash:config.text

When you see this message **Destination filename [config.text]?** Just press enter.

12. From the **switch:** prompt, enter:
copy flash:config.text system:running-config

When you see this message **Destination filename [running-config]?** Just press enter.

Remember, at this point you have loaded the original cisco config, so the prompt name might change.

13. From the **switch:** prompt, enter:
conf t (configure terminal)

14. The **switch:** prompt will now be **switch(config)** prompt, from here we can change the password with: **enable password cisco**

I am using 'cisco' as the password, you can use what you like, just don't forget it.

15. From the **switch(config)** prompt, type:
exit

To get back to the top level of the cisco menu, might have to do this twice.

16. To save the configuration enter:
wr mem
Now when you try to enter the switch with:
en
You should be prompted for a password.

From:
<http://cameraangle.co.uk/> - WalkerWiki - wiki.alanwalker.uk

Permanent link:
http://cameraangle.co.uk/doku.php?id=recover_from_forgotten_cisco_password

Last update: **2023/04/20 11:56**

