


Second Locking Code

Nov 2019

Introduction

When looking at the RX1 GUI, under servers we can see the Locking code for license generation.

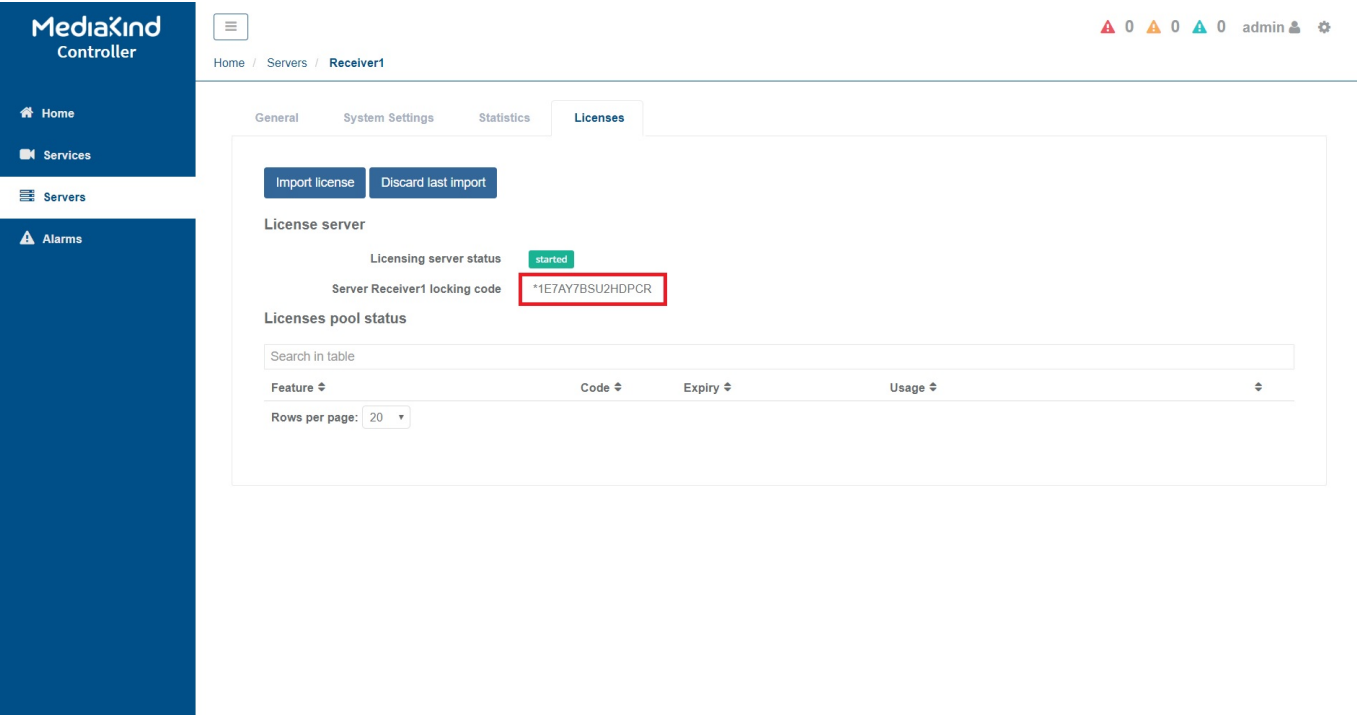

However for some licenses a second locking code is required, this code (at the time of writing) is only available from the command line.

Using either SSH or Keyboard/Mouse login to the RX1.

```
username: mfeng
password: 2u4y&C
```

from the command line, run the following:

```
cd /opt/ericsson/license-manager/bin/
sudo ./echoid -d
```

(you will have to re-enter the password)

```
Sentinel RMS Development Kit 8.6.1.1401 Host Locking Code Information Utility
Copyright (C) 2014 SafeNet, Inc.

ID PROM                : 0x0
Disk ID                : 0x4A1366D6
Host name              : ENV-4E-963668
Ethernet address[1]    : 74-FE-48-28-6E-A0
Hard Disk Serial[1]    : 002732101E4C
CPU Info String        : GenuineIntel Intel(R) Xeon(R) CPU E3-1245 v6 @ 3.70GHz 6 14
9
UUID                  : 4A30AAC8-F4E7-7241-8D20-18132D95D984

Locking Code 1 [1] : 2018-*1E7 AY7B SU2H DPCR
Locking Code 1 [1] (Old Style) : 2018-5F41F
```

```
-----  
Ethernet address[2]      : 74-FE-48-28-6E-A1  
Hard Disk Serial[1]     : 002732101E4C  
  
Locking Code 1 [2] : 2018-*162 UJRZ V257 RZFA  
Locking Code 1 [2] (Old Style) : 2018-6F41B  
-----
```

You will get an output similar to the above with Locking Code 1 (this is the locking code you can see from the GUI) and Locking Code 2, the second locking code required for some licenses.

From:

<http://cameraangle.co.uk/> - WalkerWiki - wiki.alanwalker.uk

Permanent link:

http://cameraangle.co.uk/doku.php?id=second_locking_code

Last update: **2023/03/09 22:35**

