

NTP Server Functions

Mar 2017

If you just wanted a clock, then you don't have to worry about this section, however if you want your clock to act as an NTP (Network Time Protocol) server, so that all of the computers in your house are synchronised in time to the time of your Raspberry Pi Clock, then read on.

There are two parts for this:

Firstly we need our Raspberry Pi to get the correct time from an Internet Time Server, this will keep the time on our Raspberry Pi very accurate (to within a few 10s on milliseconds).

Secondly, we want our computers to speak to the Raspberry Pi to ask for the time, so everything on the network has the same time, but only one device (the Raspberry Pi) needs to check the Internet for the time (thus guaranteeing that all computers will be the same).

Install NTP

First we need to install the NTP software, this may already be installed, just run the command below.

```
sudo apt-get install ntp
```

If NTP is not installed then the installation will start, if NTP is already installed you will the following message.

```
ntp is already the newest version.  
0 upgraded, 0 newly installed, 0 to remove and 0 not upgraded.
```

This may already be installed, but just in case.

```
<sxh [txt]; options for SyntaxHighlighter> Reading package lists... Done Building dependency tree Reading state information... Done  
Suggested packages:
```

```
ntp-doc
```

The following NEW packages will be installed:

```
ntp
```

```
0 upgraded, 1 newly installed, 0 to remove and 0 not upgraded. Need to get 334 kB of archives. After this operation, 988 kB of additional  
disk space will be used. Get:1 http://mirrordirector.raspbian.org/raspbian/ jessie/main ntp armhf 1:4.2.6.p5+dfsg-7+deb8u2 [334 kB]  
Fetched 334 kB in 5s (57.7 kB/s) Selecting previously unselected package ntp. (Reading database ... 31977 files and directories currently  
installed.) Preparing to unpack .../ntp_1%3a4.2.6.p5+dfsg-7+deb8u2_armhf.deb ... Unpacking ntp (1:4.2.6.p5+dfsg-7+deb8u2) ...  
Processing triggers for man-db (2.7.0.2-5) ... Processing triggers for systemd (215-17+deb8u6) ... Setting up ntp  
(1:4.2.6.p5+dfsg-7+deb8u2) ... update-rc.d: warning: start and stop actions are no longer supported; falling back to defaults </sxh>
```

Edit NTP Configuration File

Now that NTP is installed, we need to set it up, this is done via a configuration file called **ntp.conf**.

```
sudo nano ntp.conf
```

Find the section that looks like the following:

```
# You do need to talk to an NTP server or two (or three).  
#server ntp.your-provider.example
```

```
# pool.ntp.org maps to about 1000 low-stratum NTP servers. Your server will
# pick a different set every time it starts up. Please consider joining the
# pool: <http://www.pool.ntp.org/join.html>
server 0.debian.pool.ntp.org iburst
server 1.debian.pool.ntp.org iburst
server 2.debian.pool.ntp.org iburst
server 3.debian.pool.ntp.org iburst
```

And comment out **ALL** of the servers in this section so that it looks like the following:

```
# pool.ntp.org maps to about 1000 low-stratum NTP servers. Your server will
# pick a different set every time it starts up. Please consider joining the
# pool: <http://www.pool.ntp.org/join.html>
# server 0.debian.pool.ntp.org iburst
# server 1.debian.pool.ntp.org iburst
# server 2.debian.pool.ntp.org iburst
# server 3.debian.pool.ntp.org iburst
```

Now we can add our own NTP servers that we wish to use.

I am in the UK, so I wanted UK time servers, for a list of servers I just did a Google search for **UK time servers**. Using this Google search I found the (first result) was this site pool.ntp.org

The site lists the following four UK based time servers:

```
server 0.uk.pool.ntp.org
server 1.uk.pool.ntp.org
server 2.uk.pool.ntp.org
server 3.uk.pool.ntp.org
```

Paste these files in to the same section that you just commented out the original server list from.

```
# You do need to talk to an NTP server or two (or three).
#server ntp.your-provider.example

# pool.ntp.org maps to about 1000 low-stratum NTP servers. Your server will
# pick a different set every time it starts up. Please consider joining the
# pool: <http://www.pool.ntp.org/join.html>
# server 0.debian.pool.ntp.org iburst
# server 1.debian.pool.ntp.org iburst
# server 2.debian.pool.ntp.org iburst
# server 3.debian.pool.ntp.org iburst

server 0.uk.pool.ntp.org
server 1.uk.pool.ntp.org
server 2.uk.pool.ntp.org
server 3.uk.pool.ntp.org
```

Now save and close the file (**Ctrl-X** and then **S** to save)

Restart NTP

To get the Raspberry Pi to sync, we can restart the NTP service. Use the following to restart the NTP server.

```
sudo service ntp restart
```

Now check the current time and date using the **date** command.

```
date
Fri 17 Mar 18:38:59 UTC 2017
```

If the time and date are correct, then you are good to go.

Check NTP Servers

You can test to see if NTP on the Raspberry Pi is actually using any external time servers by using the `ntpq -pn` command.

```
ntpq -pn
```

remote	refid	st	t	when	poll	reach	delay	offset	jitter
*130.159.196.118	193.62.22.90	2	u	78	64	36	61.470	-17.318	15.763
78.129.190.21	85.199.214.102	2	u	9	64	37	13.979	0.712	0.680
87.124.126.49	195.66.241.10	2	u	9	64	37	15.417	1.572	3.078
192.146.137.13	82.148.230.254	2	u	8	64	37	42.823	-1.197	2.624

After running the command `ntpq -pn` you should see a list of time servers (by IP) that the NTP service on the Raspberry Pi has connected to. The IP Address with the asterisk `*` next to it is the last server the Raspberry Pi did a time sync with.


Synchronising Clients

LINUX

Synchronising **Linux** clients is pretty much the same as we have already done, except in the `/etc/ntp.conf` instead of putting internet time servers, you just enter the internal IP address of your NTP server.


WINDOWS

For **Windows** PCs we will have to set the NTP server in the time settings. To do this, first right click the clock in the bottom right hand side of the screen.

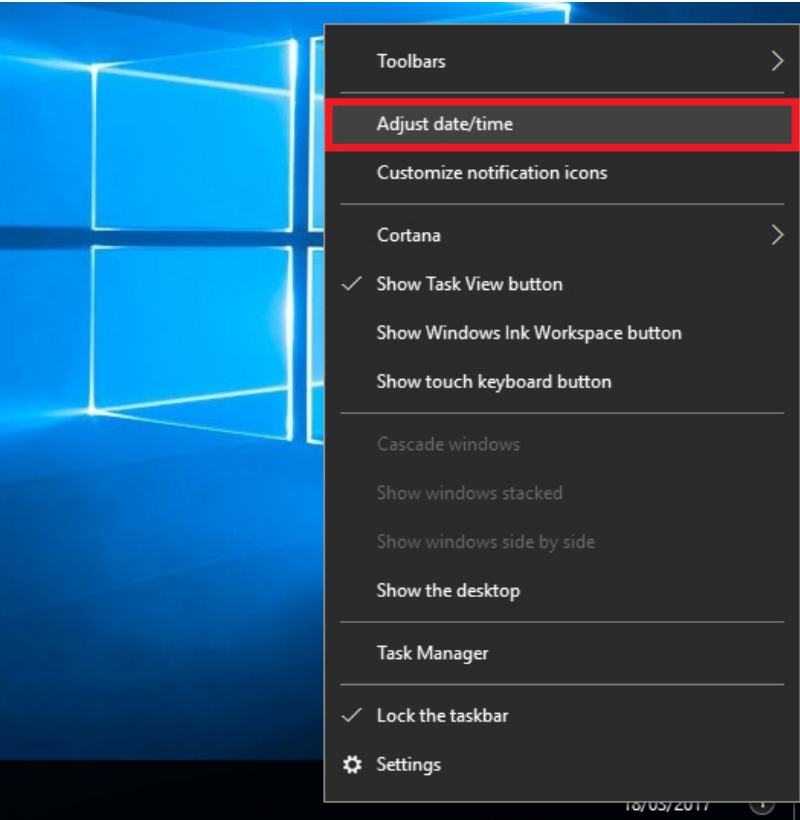

Select 'Adjust date/time'


When the next page opens, scroll down.

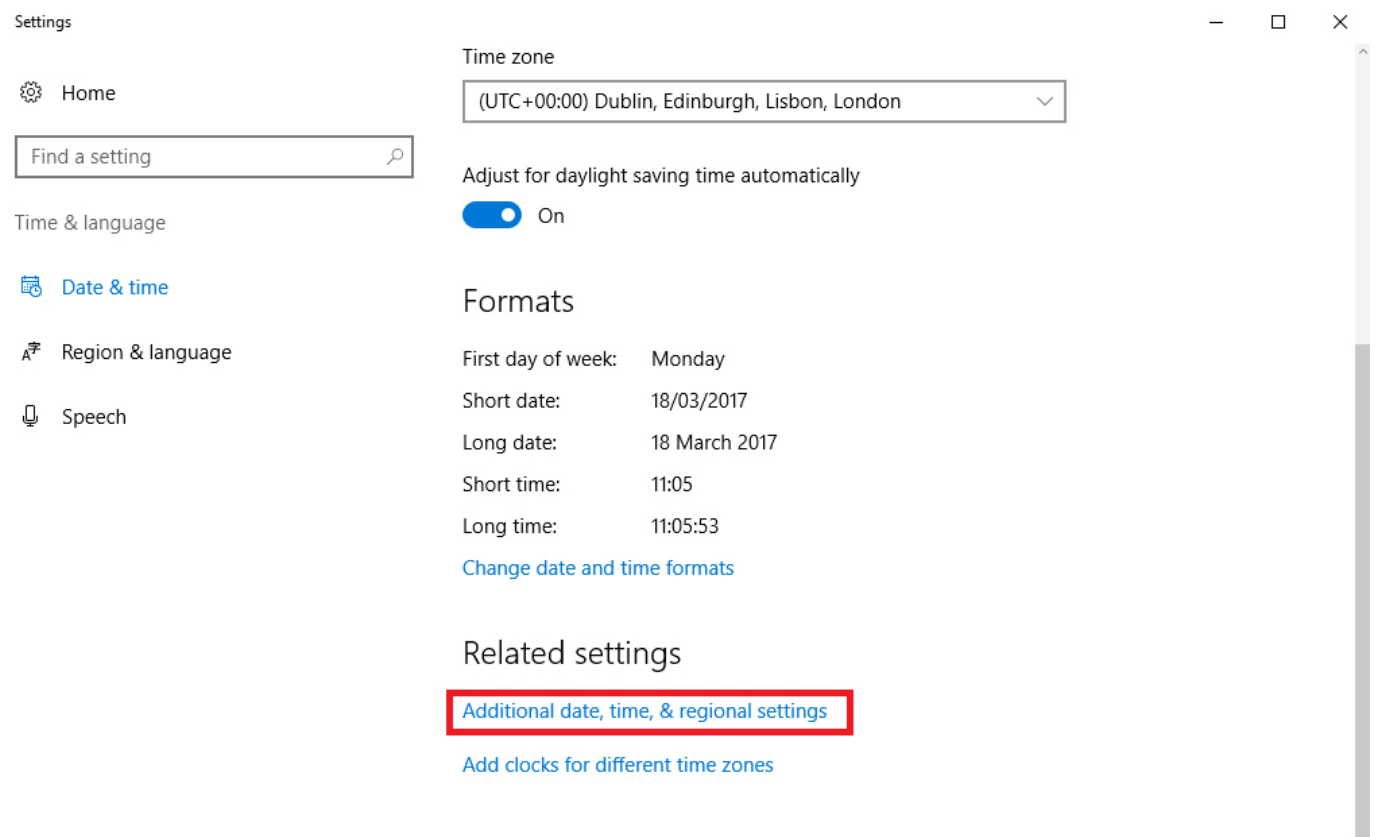

The screenshot shows the Windows Settings application with the 'Date & time' section selected. On the left sidebar, 'Date & time' is highlighted in blue. The main content area shows the 'Time zone' set to '(UTC+00:00) Dublin, Edinburgh, Lisbon, London' and 'Adjust for daylight saving time automatically' is turned 'On'. Under the 'Formats' section, the first day of the week is 'Monday', short date is '18/03/2017', long date is '18 March 2017', short time is '11:05', and long time is '11:05:53'. A link 'Change date and time formats' is present. Under 'Related settings', the link 'Additional date, time, & regional settings' is highlighted with a red rectangle.

Select 'Additional date, time, & regional settings'


When the next page opens.

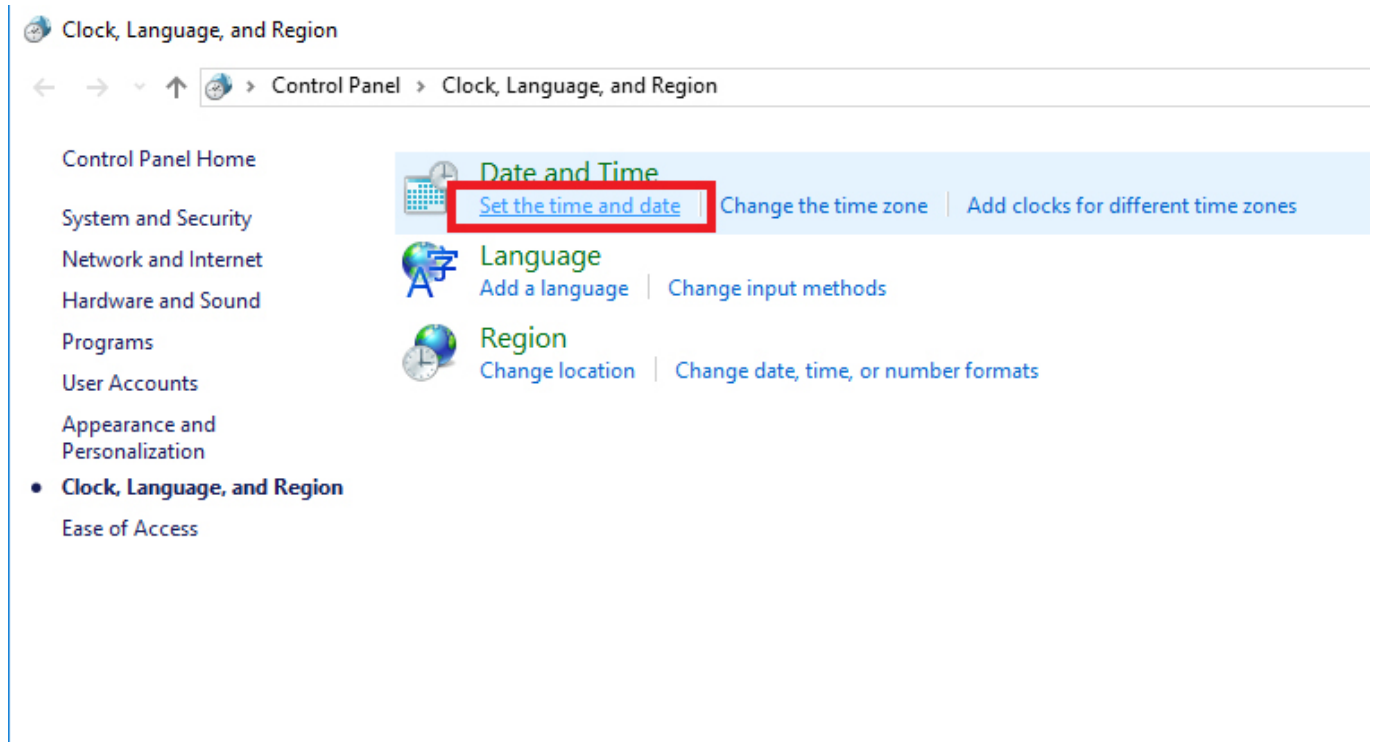

The screenshot shows the Windows Control Panel with the 'Clock, Language, and Region' section selected. The left sidebar lists various control panel categories, with 'Clock, Language, and Region' highlighted. The main content area shows three sections: 'Date and Time' with a link 'Set the time and date' highlighted by a red rectangle, 'Language' with links 'Add a language' and 'Change input methods', and 'Region' with links 'Change location' and 'Change date, time, or number formats'.


Select 'Set the time and date'

On the next page.

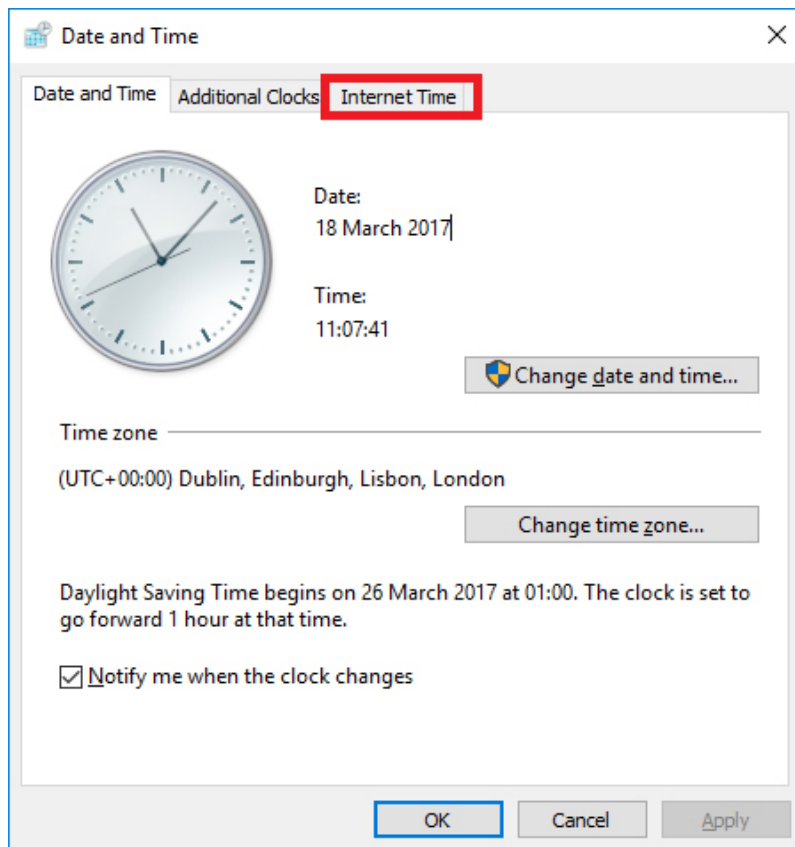


Select the 'Internet Time' tab.

On the next page.

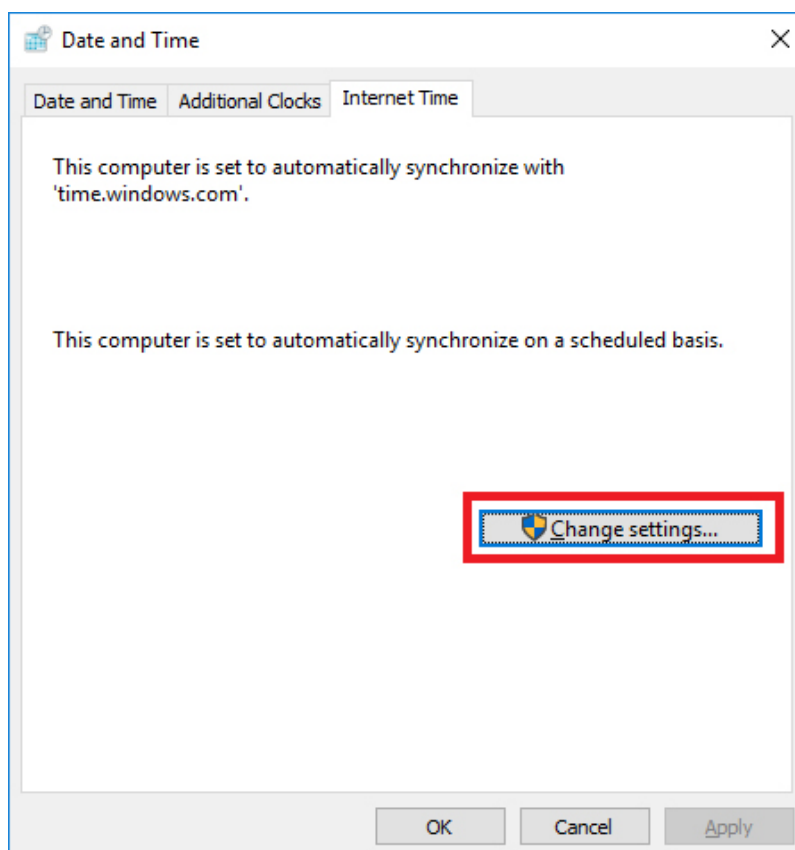


Select the Change Settings button.

On the next page we will see a box that contains time.windows.com

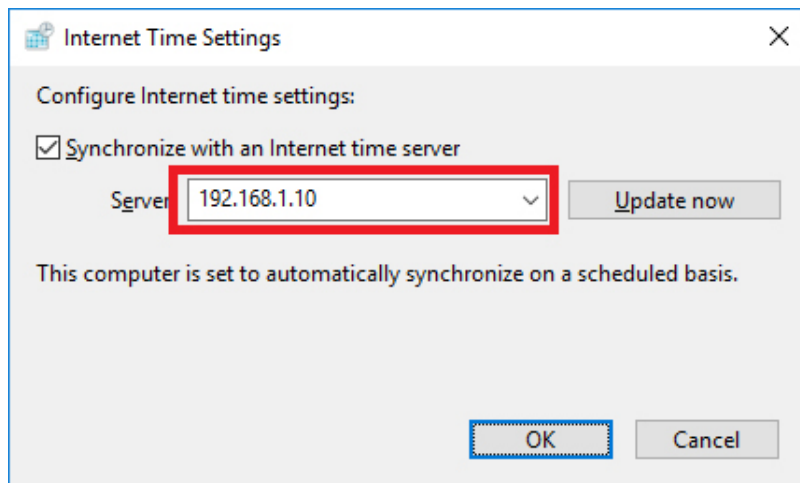

Change the contents of this box to the IP Address of the Raspberry Pi running the NTP server.

Finally, Click the **Update** Button.

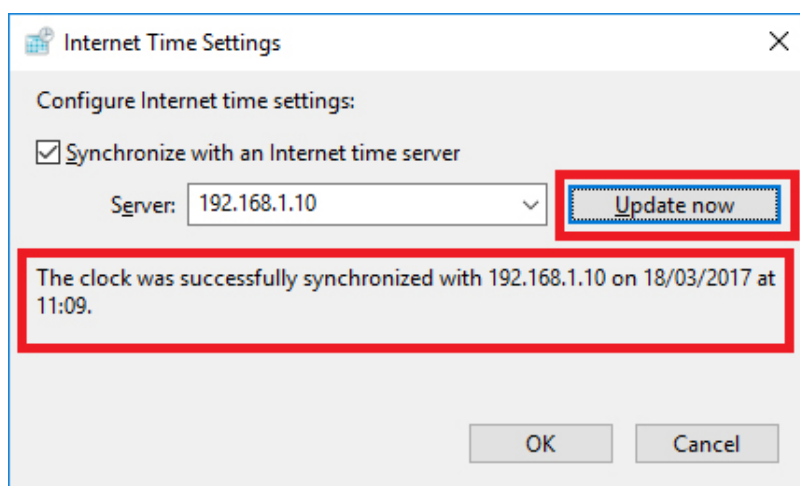

The time should now be updated, you will see confirmation in this page (I have to do this twice sometimes)

That's it.

Clients over 1000 Seconds out of time

"NTP won't normally reset the clock if it's off by more than 1000s. If you run:

```
ntpd -gq'
```

It ignores the clock being way adrift from ntp time and will force it to be correct then close. The old ntpdate program does the same thing."

Credit: [External Link](#)

Raspberry Pi Dropping of Wireless Network

I found my raspberry Pi Zero, that is using the official Raspberry Pi Wireless Dongle drops off the wireless network after around a week. Only a reboot gets it back (as I have no keyb/mouse connected) so I figured just using Cron to reboot the thing every 24 hours will be a suitable work around.

To use cron (should already be installed):

```
sudo crontab -e (reboots require super user rights)
```

Insert the following line:

```
0 0 * * * /sbin/shutdown -r
```

Explanation:

m	h	dom	mon	dow	command
minute	hour	dayOfMonth	Month	dayOfWeek	commandToRun

so the line

```
0 0 * * * /sbin/shutdown -r
```

would reboot your system every day at 00:00.

Use Ctrl+X, Y, Enter. This will save and exit crontab (if using nano)

From:

<http://cameraangle.co.uk/> - WalkerWiki - wiki.alanwalker.uk

Permanent link:

http://cameraangle.co.uk/doku.php?id=the_ntp_functions

Last update: **2023/03/09 22:35**

