

# G6 2U Node Distribution

Platform model:Multi Screen Encoder  
Serial number:4e-000064  
Part number:IB-00035-01-XS  
Firmware:Muse  
Version:5.0.830 (021)  
ISO version:MUSE-CUSTOM  
Upgrade expiration: Unknown  
Date:2016-08-17 11:44:56 +01:00

When using the G6 2U four node MFEL (Muse Live) you must explicitly designate one of the four nodes for each encoding profile, because by default they will all try to use the first node.

When creating a profile, on the **Video Streams Settings** page look for the section entitled **Encoding Distribution**



In this example we have 8 profiles:

1 x UHD 3 x HD 4 x SD

Because this is a UHD TV HEVC Transcode, the node with the SDI card (Master) will use a lot of CPU resources doing the decode. So due to this we will distribute our services as follows:

UHD - Slave 1/2 (although you select node 1 in the dropdown, node 2 will also be used, this is due to the settings in the **/opt/envivio/muse/ini/mpeg4.cfg** file).

HD - All set to Slave 3

SD - All SD set to Master.

From:

<http://cameraangle.co.uk/> - WalkerWiki - [wiki.alanwalker.uk](http://wiki.alanwalker.uk)

Permanent link:

[http://cameraangle.co.uk/doku.php?id=wiki:g6\\_2u\\_node\\_distribution](http://cameraangle.co.uk/doku.php?id=wiki:g6_2u_node_distribution)

Last update: **2023/03/09 22:35**

