Workaround for Bug 41288 [Performances]

NUMA Core Operation

This Advanced Parameter controls the NUMA configuration on the MFEL. For this to work the NUMA settings in the BIOS must have been correctly configured.

The default value for the following is false, we changed it to true. This was for 2 HEVC services on a single 1U G6 (1052)

masterSlave.setPreferredNumaNode=true

If the NUMA Node is set to true, then this will limit a service to using only a single NUMA node (one CPU and Memory).


If the NUMA Node is set to false, then this will allow a service to use both NUMA Nodes (so both CPUs, and all memory). This is important if a service has a lot of components (say an ABR service with a lot of profiles) that could be too much for a single processor to handle.

When setting NUMA to false, you might get a performance improvement if you set the NUAM to of in the BIOS

While running htop, we can see the processors listed at the top of the page.

```
37
38
                                                                                    26
27
23456789
                                                                                                                             39
                                                                                    29
                                                                                                                             41
                                                                                                                             42
43
                                                                                    30
31
32
33
                                         20
21
22
23
24
                                                                                                                             44
                                                                                                                             45
10
                                                                                    34
                                                                                                                             46
                                                                                    35
                                                                                                                             47
12
                                                                                    36
                                                                                                                             48
                                                                                              47,
                                                                                                     287
                                                                                                                      running
                                                                                    Load average:
                                                                                                                  0.15 0.11
                                                                                    Uptime: 6 days,
```


In the above example we can see 48 cores from the two CPUs, these are organised in the following way:

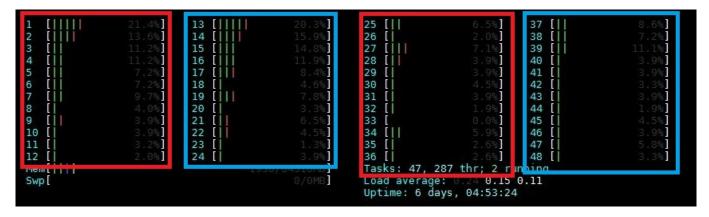

The two red boxes are for the first NUMA node, the blue boxes are for the second NUMA node. In the above example we can see that although the MFEL is only running a single service, some cores from each NUMA node are being used.

This is because we have allowed this in the Advanced Parameters (masterSlave.setPreferredNumaNode=false) If we change the masterSlave.setPreferredNumaNode settting to false then we get the following output from http.


update: 2023/03/09 wiki:workaround_for_bug_41288_-_performances_controlling_numa_core_operation http://cameraangle.co.uk/doku.php?id=wiki:workaround_for_bug_41288_-_performances_controlling_numa_core_operation 22:35

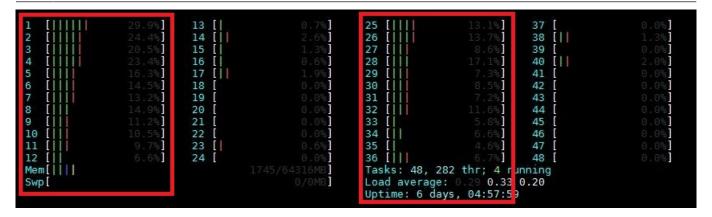

Here we can see that with a single service, all of the work is being done by one NUMA node, the activity on the other NUMA node is just basic OS tasks.

Processor Occupancy

We know that there are many cores (CPUs) per socket, and these cores are allocated by the operating system. However the allocation of processor cores isn't actually that random.

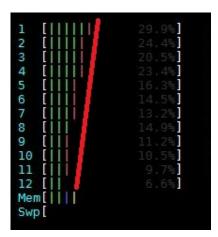

The diagram above shows one of the NUMA cores, and it can be seen that the cores are used in order, and that core 1 is always the most used core, while the lower cores may get only the occasional use. This of course doesn't mean much, but it is interesting to know.

When setting NUMA to false, you might get a performance improvement if you set the NUMA to off in the BIOS

From:

http://cameraangle.co.uk/ - WalkerWiki - wiki.alanwalker.uk

Permanent link:

 $http://camera angle.co.uk/doku.php?id=wiki:work around_for_bug_41288_-performances_controlling_numa_core_operations and the controlling_numa_core_operations are also as a controlling_numa_core_operations are als$

Last update: 2023/03/09 22:35



http://cameraangle.co.uk/ Printed on 2024/05/08 20:56